


DIGIMAP-i GETTING STARTED GUIDE


1. Download and Install the Digimap-i App

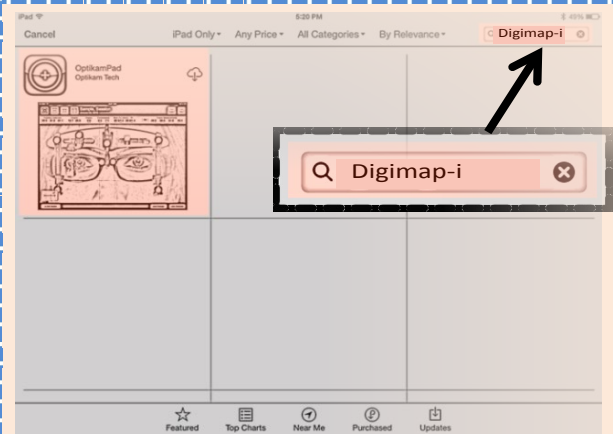

Search the Apple AppStore for **Digimap - i**

Install and open the app when installation completes.


2. Language Selection

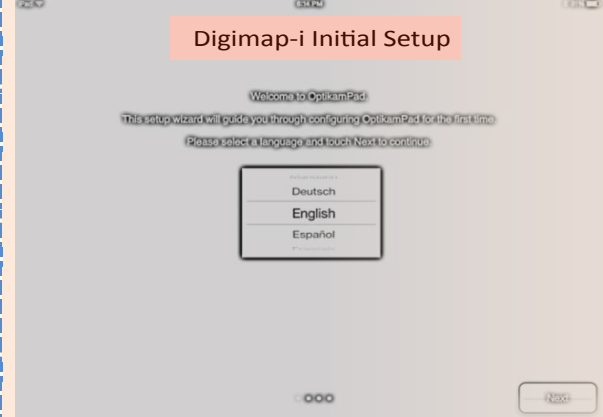

Proceed through the Initial Setup steps.

Choose the Language and tap **Next**.

3. Enclosure Pairing (iPads without camera flash)

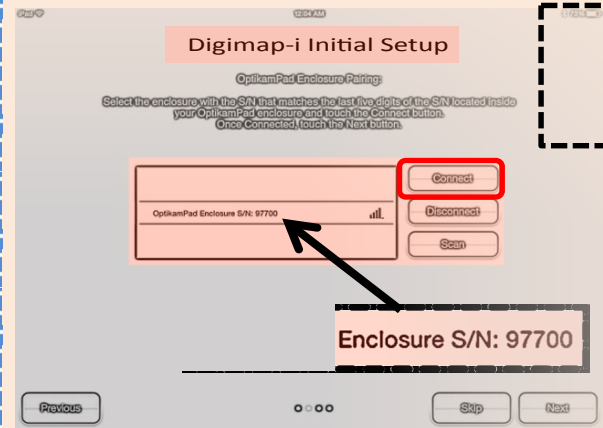

If multiple enclosures are present, tap on the one with the S/N that matches the five digits of the S/N located inside the Digimap-i enclosure. Tap the **Connect** button to pair the enclosure.


3. Enclosure Pairing (iPads without camera flash) continued ...



Verify that the correct enclosure is illuminated.

Tap **Next** to continue or **Skip** to proceed without enclosure pairing.


4. Account Login

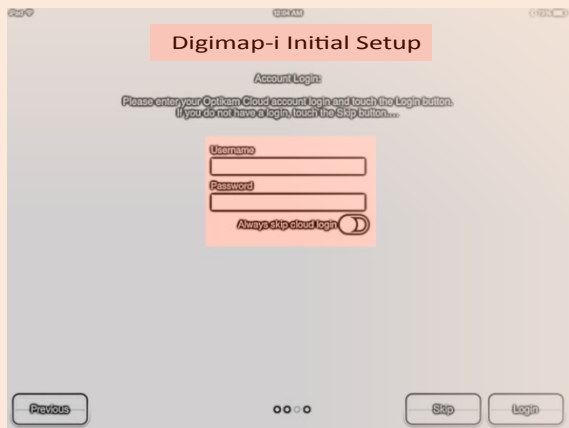

If available, enter the login information to customize your Digimap-i experience.

Tap **Next** to continue or tap **Skip** to proceed without logging in.

5. Activate the Digimap-i Posture Device (DPD)

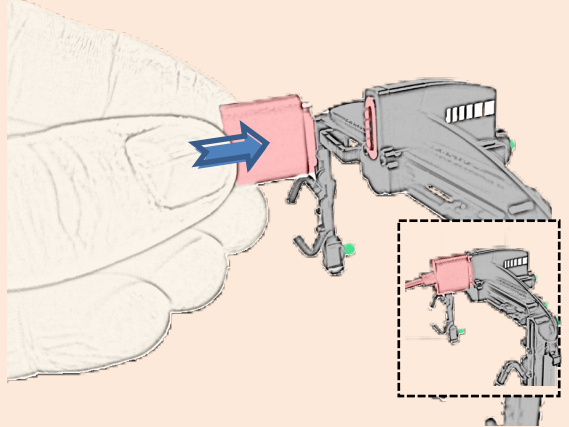


The PD must be activated prior to first use.


To activate the OPD, simply attach and remove the charging cable from the OPD.

Alternatively, if provided, plug the cradle charging cable into a USB port and place the OPD in the charging cradle.

6. Inserting iPad into enclosure (iPads without camera flash)

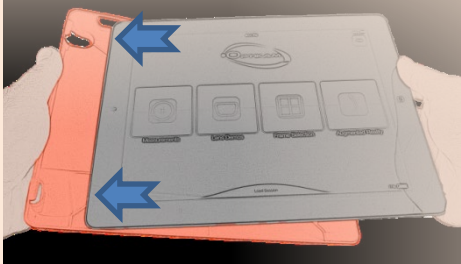


Slide the iPad into the enclosure.

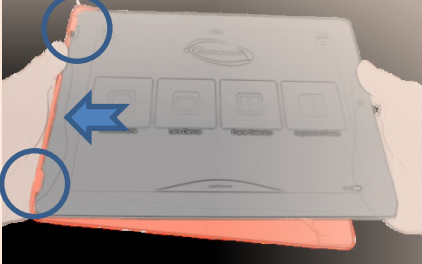

Ensure that the iPad slides under the hooks located to the left of the enclosure.




Press on the opposite end with your thumb to lock the iPad in place. A click will be heard when the iPad is locked in place.

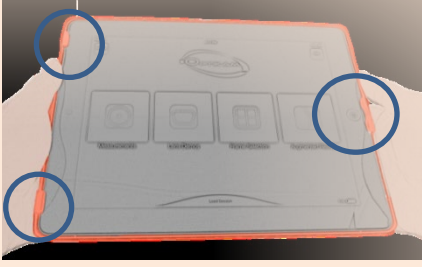


Verify that the iPad is securely held by the hooks to the left and the locking clip to the right.

7. Removing iPad from enclosure (iPads without camera flash)

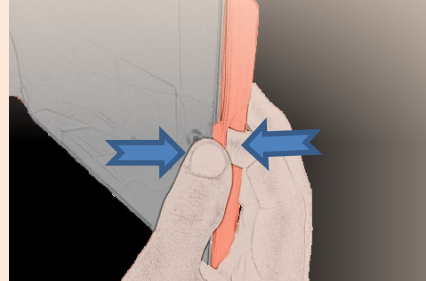

Gently push the locking clip outwards with your thumb while simultaneously pushing the iPad out of the enclosure with your index finger.

8. Charging the enclosure (iPads without camera flash)

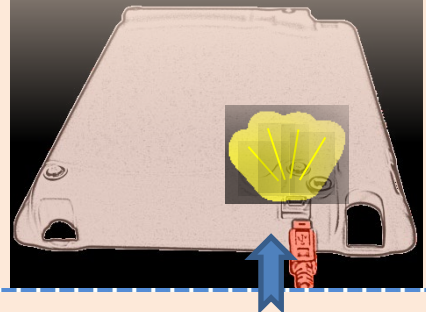

Plug the enclosure to any computer USB port or USB charger using the provided cable.

The enclosure will flash indicating charge speed:
1-High 2-Low 5-Error

9. Charging the enclosure (iPads without camera flash) continued ...



Note: The enclosure battery icon will not update itself unless the user taps the icon.

10. Battery Power (iPads without camera flash)

Digimap i enclosure is equipped with a light sensor located to the side of the USB socket. To preserve battery power, when not in use, store the enclosure in a dark location such as the original box or a desk drawer.

11. Cleaning and Care

Wet a soft lens cleaning cloth with tap water and gently clear off any dirt and fingerprints from the back of the enclosure.

DO NOT submerge the enclosure in any liquid or use any abrasives or chemicals to clean the enclosure.

12. Digimap-i Help

Please visit <https://yashopticsandlens.com/> to access more Digimap-i help content.